ASSOCIATION GUIDE BL-NR

I. DOWNLOAD SolemWF APP



Make sure that your device is connected to the internet (Wi-Fi or 3G minimum) and that it is compatible Bluetooth Smart V4.0.

Download the SolemWF V3.1 minimum App on the AppStore





II. BATTERY INSTALLATION



Remove the green cover and the Sealing cap




Place the battery in the compartment Respect the polarity



Replacer le bouchon d'étanchéité le cache vert

III. BL-NR CONFIGURATION

- 1 - Don't Forget to activate Bluetooth of your Smartphone or Tablet

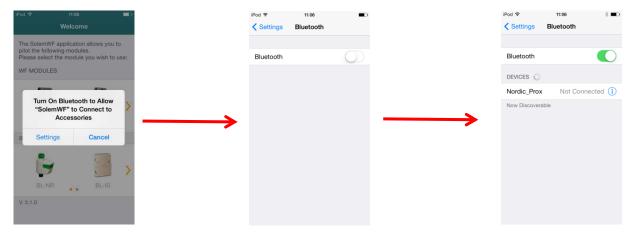

If you have forgotten to activate your smartphone or tablet, the App SolemWF propose you to activate it and send you to the settings of the smartphone or tablet.

- 2 - If you open the App and if you install the product for the first time.



Launch SolemWF App



Push on the picture of the BL-NR



Push on the Number displayed in orange. It is the same number on the label at the backside of the product




Initialization BLNR-020024 Change name Security key BLNR-020024 Change the key? Changing the security key will cancel the association of the module BLNR-020024 with your other devices. Associate QWERTYUIOP A S D F G H J K L ↑ Z X C V B N M


✓ 1 3 DEF 123 ⊕ ℚ space **4** _{GHI} 5 JKL 6 MNO Change the Name of the product 9 wxyz 8 TUV 0

Add a security key

The security key allow to protect themselves from malicious neighbors

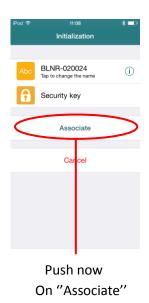



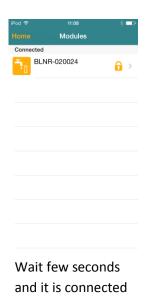

To schedule, change its name and make a manual station or other, launch the App SolemWF, press the number or the name of the product and let it guide you through the application. If the association has been already made and if you replace the battery in the case, no need to redo the association, wait 2 minutes that the product initialize with your phone.

at the beginning "disconnected"

- 2 - If you want to re-associate the BL-NR.



Launch the App "SolemWF"





Push on "Add a module"




Push on the number corresponding to the label on the back of the product



The App ask the security key



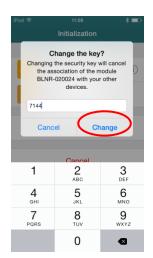

Enter the key and push on "Associate"

If you have forgotten the security key, you need to restart the association at the point II of this procedure after having disconnected the battery, waited 10 s, and reconnected the battery.